

LUMINOUS



LD6000-INX Online UPS

User Guide



Please comply with all warnings and operating instructions in this manual strictly. Save this manual properly. Please read the safety information and operating instructions carefully before operating this unit.

Table of Contents

1. SAFETY AND EMC INSTRUCTIONS	1
1-1. TRANSPORTATION AND STORAGE.....	1
1-2. PREPARATION	1
1-3. INSTALLATION	1
1-4.  CONNECTION WARNINGS.....	2
1-5. OPERATION	3
1-6. STANDARDS.....	3
2. INSTALLATION AND OPERATION	4
2-1. REAR PANEL VIEW.....	4
2-2. SINGLE UPS INSTALLATION	4
2-3. SOFTWARE INSTALLATION	6
3. OPERATIONS	6
3-1. BUTTON OPERATION	6
3-2. LED INDICATORS AND LCD PANEL	6
3-3. AUDIBLE ALARM	8
3-4. SINGLE UPS OPERATION	9
3-5. ABBREVIATION MEANING IN LCD DISPLAY	11
3-6. LCD SETTING	11
3-7. OPERATING MODE/STATUS DESCRIPTION.....	17
3-8. FAULT CODE.....	18
3-9. WARNING INDICATOR.....	18
4. TROUBLE SHOOTING	21
5. MAINTENANCE	22
6. SPECIFICATIONS	23
EQUIPMENT DETAILS.....	24

1. Safety and EMC instructions

1-1. Transportation and Storage



Please transport the UPS only in the original package to protect against shocks and impacts.



The UPS must be stored in the room which is ventilated and dry.

1-2. Preparation



Condensation may occur if the UPS system is moved directly from cold to warm environment. The UPS system must be absolutely dry before being installed. Please allow at least two hours for the UPS system to acclimatize with the environment.



Do not install the UPS system near water or in moist environments.



Do not install the UPS system where it would be exposed to direct sunlight or nearby heater.



Do not block ventilation holes in the UPS housing.

1-3. Installation



Do not connect appliances or devices which would overload the UPS (e.g. big motor-type equipment) to the UPS output sockets or terminal.



Place cables in such a way that no one steps on or trips over them.



Do not block air vents in the housing of UPS. The UPS must be installed in a location with good ventilation. Ensure enough space on each side for ventilation.



UPS has provided earthed terminal, in the final installed system configuration, equipotential earth bonding to the external UPS battery cabinets.



The UPS should be installed only by qualified maintenance personnel.



An appropriate disconnect device as short-circuit backup protection should be provided for the UPS in the building wiring installation.



An integral single emergency switching device which prevents further supply to the load by the UPS in any mode of operation should be provided in the building wiring installation.



Connect the earth before connecting to the UPS to building wiring terminal.



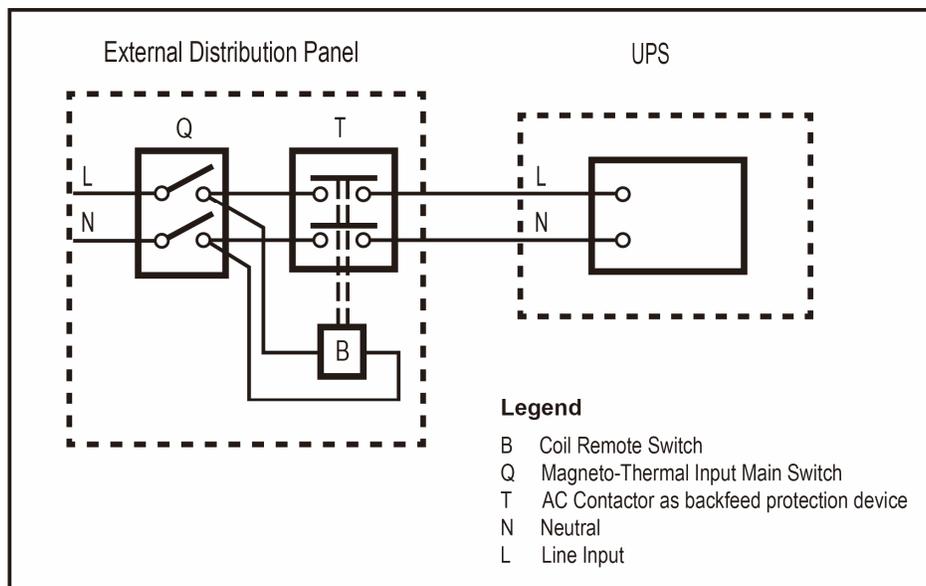
Installation and Wiring must be performed in accordance with the local electrical laws and regulations.



Before installation, verify and ensure that maintenance bypass switch handle lock is screwed tightly.

1-4. Connection Warnings

- There is no standard backfeed protection inside the UPS, hence please isolate the UPS before working according to this circuit. The isolation device must be able to carry the UPS input current.



- This UPS should be connected with **TN** earthing system.
- The power supply for this unit must be single-phase rated in accordance with the equipment nameplate. It must also be suitably grounded.
- Use of this equipment in life support applications where failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety or effectiveness is not recommended. Do not use this equipment in the presence of a flammable anesthetic mixture with air, oxygen or nitrous oxide.
- Connect your UPS power module's grounding terminal to a grounding electrode conductor.
- The UPS is connected to a DC energy source (battery). The output terminals may be live even when the UPS is not connected to an AC supply.

Before working on this circuit

- Isolate Uninterruptible Power Supply System (UPS)
- Then check for Hazardous Voltage between all terminals including the protective earth.

 **Risk of Voltage Backfeed**

1-5. Operation



Do not disconnect the earth conductor cable on the UPS or the building wiring terminals at any time since this would cancel the protective earth of the UPS system and of all connected loads.



The UPS system features its own current source (batteries). The UPS output sockets or output terminal blocks may be electrically live even if the UPS system is not connected to the building wiring outlet.



In order to fully disconnect the UPS system, first press the "OFF" button and then disconnect the mains and disconnect the battery supply.



Ensure that no liquid or other foreign objects ever enter the UPS system.

1-6. Standards

* Safety	
IEC/EN 62040-1	
* EMI	
Conducted Emission.....:IEC/EN 62040-2	Category C3
Radiated Emission.....:IEC/EN 62040-2	Category C3
*EMS	
ESD.....:IEC/EN 61000-4-2	Level 4
RS..... :IEC/EN 61000-4-3	Level 3
EFT..... :IEC/EN 61000-4-4	Level 4
SURGE..... :IEC/EN 61000-4-5	Level 4
CS..... :IEC/EN 61000-4-6	Level 3
Power-frequency Magnetic field..... :IEC/EN 61000-4-8	Level 4
Low Frequency Signals.....:IEC/EN 61000-2-2	
Warning: This is a product for commercial and industrial application in the second environment-installation restrictions or additional measures may be needed to prevent disturbances.	

Package Contents:

1. **UPS**
2. **External battery connector cable**
3. **Serial/USB communication cable**
4. **UPS management software CD**

2. Installation and Operation

These UPS do not have internal batteries. It needs external SMF batteries.

Model	Power Rating
LD6000-INX	6000VA

NOTE: Before installation, please inspect the unit. Be sure that nothing inside the package is damaged during transportation. Do not turn on the unit and notify the carrier and dealer immediately if there is any damage or missing parts. Please keep the original package in a safe place for future use.

2-1. Rear Panel View

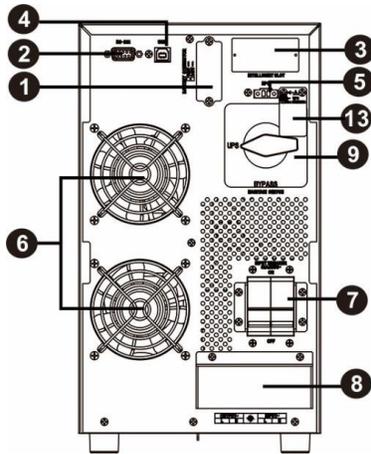


Diagram 1: Rear Panel

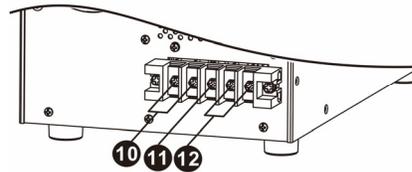


Diagram 2: Input/Output Terminal

1. External battery connector
2. RS-232 communication port
3. Intelligent slot
4. USB communication
5. Emergency power off function connector (EPO connector)
6. Cooling fan
7. Input circuit breaker
8. Input/Output terminal (Refer to Diagram 2 for the details)
9. Maintenance bypass switch
10. Output terminal
11. Grounding terminal
12. Utility input terminal
13. Maintenance bypass switch handle lock

2-2. Single UPS Installation

Installation and wiring must be performed in accordance with the local electric laws/regulations. Please follow these instructions

- 1) Make sure the mains wire and breakers in the building are in compliance with the standard and of rated capacity of UPS to avoid the hazards of electric shock or fire.

NOTE: Do not use the wall receptacle as the input power source for the UPS, as its rated current is less

than the UPS's maximum input current. The receptacle may get burned and destroyed.

- 2) Switch off the mains switch to disconnect the power supply in the building before installation.
- 3) Turn off all the connected devices before connecting to the UPS.
- 4) Recommended wire spec (min):

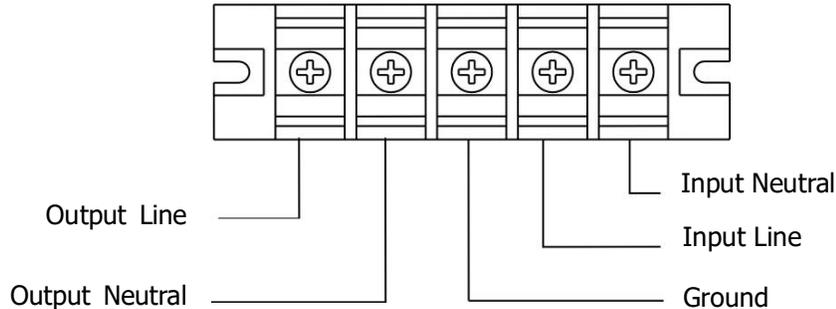
Model	Wiring spec (AWG)			
	Input	Output	Battery	Ground
LD6000-INX	10	12	12	12

NOTE: Selection of color of wires should be as per the local electrical laws and regulations.

- 5) Remove the terminal block cover on the rear panel of UPS then connect the wires according to the following terminal block diagram:



Connect the earth wire first when making wire connection. Disconnect the earth wire last when dismantling the wire connections!



Terminal Block wiring diagram

NOTE 1: Make sure that the wires are connected tightly with the terminals.

NOTE 2: Please install the output breaker between the output terminal and the load. The breaker should be qualified with leakage current protective function if necessary.

- 6) Put the terminal block cover back to the rear panel of the UPS.



Warnings:

- Make sure the UPS is not turned on before installation or during wiring connection.
- If a DC breaker or other protection device is installed between UPS and external battery pack then make sure it is switched off. If not, please install it carefully.
- Pay attention to the polarity marking on external battery terminal block, and make sure the correct battery polarity is connected. Wrong connection may cause permanent damage of the UPS.
- Make sure the protective earth ground wiring is correct. The current spec, color, position, connection and conductance reliability of wire should be checked carefully.
- Make sure the utility input & output wiring is correct. The current spec, color, position, connection and conductance reliability of wire should be checked carefully. Make sure the L/N terminal is correct, not reverse or short-circuited.

2-3. Software Installation

For optimal computer system protection, install UPS monitoring software to fully configure UPS shutdown.

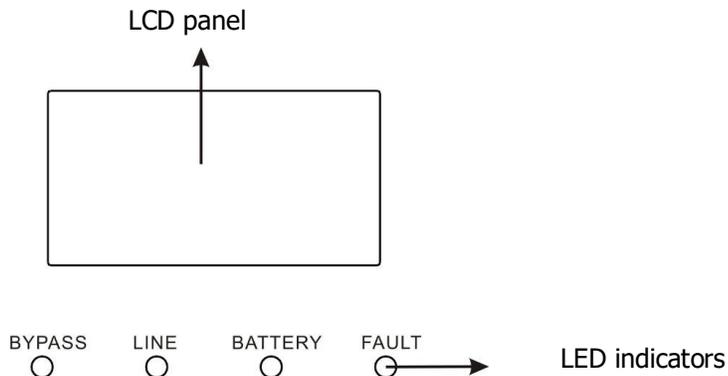
3. Operations

3-1. Button Operation

Button	Function
ON/Enter Button	<ul style="list-style-type: none"> ➤ Turn on the UPS: Press and hold the button more than 1s to turn on the UPS. ➤ Enter Key: Press this button to confirm the selection in setting menu.
OFF/ESC Button	<ul style="list-style-type: none"> ➤ Turn off the UPS: Press and hold the button more than 1s to turn off the UPS. ➤ Esc key: Press this button to return to last menu in setting menu.
Test/Up Button	<ul style="list-style-type: none"> ➤ Battery test: Press and hold the button more than 1s to test the battery while in AC mode, or CVCF mode. ➤ UP key: Press this button to display Next selection in setting menu.
Mute/Down Button	<ul style="list-style-type: none"> ➤ Mute the alarm: Press and hold the button more than 1s to mute the buzzer. Please refer to section 3-4 "Mute the buzzer" for details. ➤ Down key: Press this button to display previous selection in setting menu.
Test/Up + Mute/Down Button	<ul style="list-style-type: none"> ➤ Press and hold the two buttons simultaneous more than 1s to enter/escape the setting menu.

* CVCF mode means converter mode.

3-2. LED Indicators and LCD Panel



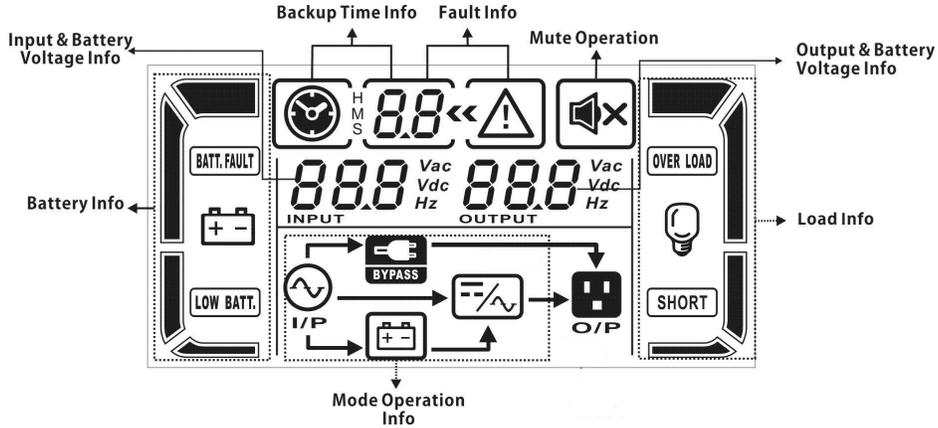
LED Indicators:

There are 4 LEDs on front panel to show the UPS working status:

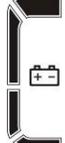 
Mode \ LED	Bypass	Line	Battery	Fault
UPS Startup	●	●	●	●
Bypass mode	●	○	○	○
AC mode	○	●	○	○
Battery mode	○	○	●	○
CVCF mode	○	●	○	○
Battery Test	●	●	●	○
Fault	○	○	○	●

Note: ● means LED is lighting, and ○ means LED is faded.

LCD Panel:



Display	Function
Backup time information	
	Indicates the backup time in numbers. H: hours, M: minutes, S: seconds
Fault information	
	Indicates that the warning and fault occurs.
	Indicates the fault codes, and the codes are listed in details in section 3-9.
Mute operation	
	Indicates that the UPS alarm is disabled.
Output & Battery voltage information	
	Indicates the output voltage, frequency or battery voltage. Vac: output voltage, Vdc: battery voltage, Hz: frequency
Load information	
	Indicates the load level by 0-25%, 26-50%, 51-75%, and 76-100%.
	Indicates overload.
	Indicates the load or the output is short.
Mode operation information	
	Indicates the UPS connected to the mains supply.
	Indicates the battery is working.
	Indicates the bypass circuit is working.
	Indicates the Inverter circuit is working.
	Indicates the output is working.

Battery information	
	Indicates the Battery capacity by 0-25%, 26-50%, 51-75%, and 76-100%.
BATT. FAULT	Indicates the battery is fault.
LOW BATT.	Indicates low battery level and low battery voltage.
Input & Battery voltage information	
	Indicates the input voltage or frequency or battery voltage. Vac: Input voltage, Vdc: battery voltage, Hz: input frequency

3-3. Audible Alarm

Description	Buzzer status	Muted
UPS status		
Bypass mode	Beeping once every 2 minutes	Yes
Battery mode	Beeping once every 4 seconds	
Fault mode	Beeping continuously	
Warning		
Overload	Beeping twice every second	No
Low battery	Beeping once every second	
Battery unconnected		
Over charge		
EPO enable		
Fan failure/Over temperature		
Charger failure		
Overload 3 times in 30min		
EPO status		
Cover of maintain switch is open		
Fault		
Bus start failure	Beeping continuously	Yes
Bus over		
Bus under		
Bus unbalance		
Inverter soft start failure		
High Inverter voltage		
Low Inverter voltage		
Inverter output short circuited		
Battery SCR short circuited		
Over temperature		
Overload		

3-4. Single UPS Operation

1. Turn on the UPS with utility power supply (in AC mode)

- 1) After power supply is connected correctly, set the breaker of the battery pack at "ON" position (if available). Then, set the input breaker at "ON" position. At this time, the fan starts running and the UPS supplies power to the loads via the bypass. The UPS is operating in Bypass mode.

NOTE: When UPS is in Bypass mode, the output voltage will directly power from utility after you switch on the input breaker. In Bypass mode, the load is not protected by UPS. To protect your precious devices, you should turn on the UPS. Refer to next step.

- 2) Press and hold the "ON" button for 1s to turn on the UPS and the buzzer will beep once.
- 3) A few seconds later, the UPS will enter to AC mode. If the utility power is abnormal, the UPS will operate in Battery mode without interruption.

NOTE: When running on battery, if the battery has run out of charge, UPS will shut down automatically. When the utility power is restored, the UPS will auto restart in AC mode.

2. Turn on the UPS without utility power supply (in Battery mode)

- 1) Make sure that the breaker of the battery pack is at "ON" position (if available).
- 2) Press and hold the "ON" button for 1s to turn on the UPS, and the buzzer will beep once.
- 3) A few seconds later, the UPS will be turned on and enter to Battery mode.

3. Connect devices to UPS

After the UPS is turned on, you can connect devices to the UPS.

- 1) Switch on the devices one by one and UPS will display total load level in LCD panel.
- 2) If it is necessary to connect the inductive loads such as a printer, the in-rush current should be calculated carefully to see if it meets the capacity of the UPS, because the power consumption of this kind of loads is too big.
- 3) If the UPS is overloaded, the buzzer will beep twice every second.
- 4) When the UPS is overloaded, please remove some loads immediately. It is recommended to have the total loads connected to the UPS less than 80% of its max power capacity to prevent overload for system safety.
- 5) If the overload time exceeds acceptable time listed in spec at AC mode, the UPS will automatically transfer the load to Bypass mode. After the overload is removed, it will return to AC mode. If the overload occurs 3 times in half hour, the UPS will be locked in Bypass mode. UPS can transfer to Line mode only by manual restart. At this time, if bypass is enabled, the UPS will power the load via bypass. If bypass function is disabled or the input power is not within bypass acceptable range, it will cut off output.

4. Charge the batteries

- 1) After the UPS is connected to the utility power, the charger will charge the batteries automatically except in Battery mode or during battery self-test.
- 2) It's suggested to charge batteries at least 10 hours before use. Otherwise, the backup time may be shorter than expected time.
- 3) Ensure that the number of batteries connected to UPS and its setting on the control board (Please refer to the section 3-4-11 for detailed setting) is correct.

-
- 4) The charging current can be changed from 1A to 6A via LCD or software. Please make sure that the charging current is suitable to battery specification.

5. Battery mode operation

- 1) When the UPS is in Battery mode, the buzzer will beep according to different battery capacity. If the battery capacity is more than 25%, the buzzer will beep once every 4 seconds. If the battery voltage drops to the alarm level, the buzzer will beep quickly (once every sec) to remind users that the battery is at low level and the UPS will shut down automatically soon. Users could switch off some non-critical loads to disable the shutdown alarm and prolong the backup time. Otherwise, there is a risk of data loss or power failure.
- 2) In Battery mode, if buzzer sound annoys, users can press the Mute button to mute the buzzer.
- 3) The backup time depends on the external battery capacity and connected load.
- 4) The backup time may reduce with higher environment temperature and or load.
- 5) When setting backup time for 16.5 hours (default value from LCD panel), after discharging 16.5 hours, UPS will shut down automatically to protect the battery. This battery discharge protection can be enabled or disabled through LCD panel control. (Refer to 3-7 LCD setting section)

6. Turn off the UPS with utility power supply in AC mode

- 1) Turn off the inverter of the UPS by pressing "OFF" button for at least 1s. The buzzer will beep once. The UPS will turn into Bypass mode.

NOTE 1: If the UPS has been set to enable the bypass output, it will bypass voltage from utility power to output sockets and terminal even though you have turned off the UPS (inverter).

NOTE 2: After turning off the UPS, please be aware that the UPS is working at Bypass mode and there is risk of power loss for connected devices.

- 2) In Bypass mode, output voltage of the UPS is still present. In order to cut off the output, switch off the input breaker. A few seconds later, there is no display shown on the LCD panel and UPS is completely switched off.

7. Turn off the UPS without utility power supply in Battery mode

- 1) Turn off the UPS by pressing "OFF" button for at least 1s, and then the buzzer will beep once.
- 2) Then UPS will cut off power to output and there is no display shown on the display panel.
- 3) Disconnect the battery supply.

8. Mute the buzzer

- 1) To mute the buzzer, please press the "Mute" button for at least 1s. If you press it again after the buzzer is muted, the buzzer will beep again.
- 2) Some warning alarms can't be muted unless the error is fixed. Please refer to section 3-3 for the details.

9. Operation in warning status

- 1) When Fault LED flashes and the buzzer beeps once every second, it means that there are some warnings in UPS operation. Users can get the fault code from LCD panel. Please check the trouble shooting table in chapter 4 for details of the warning and initiate corrective action respectively.

10. Operation in Fault mode

- 1) When Fault LED illuminates and the buzzer beeps continuously, it means that there is a fatal error

in the UPS. Users can get the fault code from display panel. Please check the trouble shooting table in chapter 4 for details.

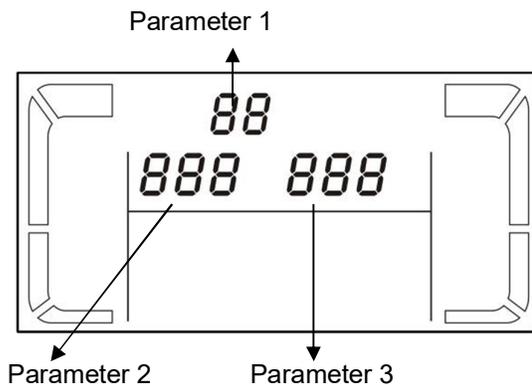
- 2) Please check the loads, wiring, and ventilation, utility, battery and so on after the fault occurs. Don't try to turn on the UPS again before solving the problems. If the problems can't be fixed, please contact the Luminous service immediately.
- 3) In case of emergency, please cut off the connection from utility, external battery and output immediately to avoid any risk.

3-5. Abbreviation Meaning in LCD Display

Abbreviation	Display content	Meaning
ENA	ENa	Enable
DIS	diS	Disable
ATO	AtO	Auto
BAT	baT	Battery
NCF	nCF	Normal mode (not CVCF mode)
CF	CF	CVCF mode
SUB	SuB	Subtract
ADD	AdD	Add
ON	ON	On
OFF	OFF	Off
FBD	Fbd	Not allowed
OPN	OPN	Allow
RES	RES	Reserved

3-6. LCD Setting

There are three parameters to be set up in the UPS. Refer to following diagram.



Parameter 1: It's for program alternatives. Refer to below table for the programs to set up.

Parameter 2 and parameter 3 are the setting options or values for each program.

Note: Please select "Up" or "Down" button to change the programs or parameters.

Programs available list for parameter 1:

Code	Description	Bypass	AC	CVCF	Battery	Battery Test
01	Output voltage	Y				
02	Output frequency	Y				
03	Voltage range for bypass	Y				
04	Frequency range for bypass	Y				
05	Reserved					
06	Reserved					
07	Reserved					
08	Bypass mode setting	Y	Y			
09	Battery maximum discharge time setting	Y	Y	Y	Y	Y
10	Reserved					
11	Reserved					
12	Reserved					
13	Battery voltage Calibration	Y	Y	Y	Y	Y
14	Reserved					
15	Inverter voltage Calibration		Y	Y	Y	
16	Floating charger voltage adjustment	Y	Y	Y	Y	Y
17	Constant charger voltage adjustment	Y	Y	Y	Y	Y
18	Charger maximum current setting	Y	Y	Y	Y	Y
19	Battery capacity and groups setting	Y	Y	Y	Y	Y
20	Backup time calibration	Y	Y	Y	Y	Y

*Y means that this program can be set in this mode.

● **01: Output voltage**

Interface	Setting
	<p>Parameter 3: Output voltage You may choose the following output voltage in parameter 3: 208: Output voltage is 208Vac 220: Output voltage is 220Vac 230: Output voltage is 230Vac. 230 is the default setting. 240: Output voltage is 240Vac</p>

● **02: Output frequency**

Interface	Setting
<p>60 Hz, CVCF mode</p>  <p>50 Hz, Normal mode</p>  <p>ATO</p>	<p>Parameter 2: Output Frequency For setting the output frequency you may choose following three options in parameter 2: 50.0Hz: The output frequency is setting for 50.0Hz. This is default setting. 60.0Hz: The output frequency is setting for 60.0Hz. ATO: If selected, output frequency will be decided according to the latest normal utility frequency. If it is from 46Hz to 54Hz, the output frequency will be 50.0Hz. If it is from 56Hz to 64Hz, the output frequency will be 60.0Hz. ATO is the default setting.</p> <p>Parameter 3: Frequency mode For setting the output frequency in CVCF mode or non-CVCF mode you may choose from following two options in parameter 3:</p>

	<p>CF: Setting UPS to CVCF mode. If selected, the output frequency will be fixed at 50Hz or 60Hz according to setting in parameter 2. The input frequency could be from 46Hz to 64Hz.</p> <p>NCF: Setting UPS to normal mode (non-CVCF mode). If selected, the output frequency will synchronize with the input frequency within 46~54 Hz at 50Hz or within 56~64 Hz at 60Hz according to setting in parameter 2. If 50 Hz selected in parameter 2, UPS will transfer to battery mode when input frequency is not within 46~54 Hz. If 60Hz selected in parameter 2, UPS will transfer to battery mode when input frequency is not within 56~64 Hz.</p> <p>*If Parameter 2 is ATO, the Parameter 3 will show the current frequency. NCF is the default setting.</p>
---	--

● **03: Voltage range for bypass**

Interface	Setting
	<p>Parameter 2: Set the acceptable low voltage for bypass. Setting range is from 110V to 209V. 170V is the default setting.</p> <p>Parameter 3: Set the acceptable high voltage for bypass. Setting range is from 231V to 276V. 264V is the default setting.</p>

● **04: Frequency range for bypass**

Interface	Setting
	<p>Parameter 2: Set the acceptable low frequency for bypass. 50 Hz system: Setting range is from 46.0Hz to 49.0Hz. 60 Hz system: Setting range is from 56.0Hz to 59.0Hz. The default value is 46.0Hz. This is the default setting.</p> <p>Parameter 3: Set the acceptable high frequency for bypass. 50 Hz: Setting range is from 51.0Hz to 54.0 Hz. 60 Hz: Setting range is from 61.0Hz to 64.0Hz. The default value is 54.0Hz</p>

● **05: reserved**

Interface	Setting
	<p>reserved</p>

● **06: reserved**

Interface	Setting
	<p>reserved</p>

● 07: reserved

Interface	Setting
<p>The LCD display shows '07<<' at the top and 'RES RES' in the middle. The display is framed by a decorative border.</p>	<p>Setting reserved</p>

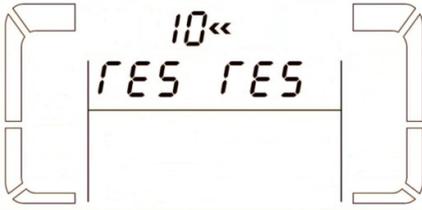
● 08: Bypass mode setting

Interface	Setting
<p>The LCD display shows '08<<' at the top and 'OPN ENA' in the middle. Below the text is a small icon of a battery with the word 'BYPASS' underneath it. The display is framed by a decorative border.</p>	<p>Parameter 2: OPN: Bypass allowed. When selected, UPS will run at Bypass mode depending on bypass enabled/disabled setting. This is default setting. This is the default setting. FBD: Bypass not allowed. When selected, it's not allowed for running in Bypass mode under any situations. Parameter 3: ENA: Bypass enabled. When selected, Bypass mode is activated. This is default setting. DIS: Bypass disabled. When selected, automatic bypass is acceptable, but manual bypass is not allowed. Manual bypass means users manually operate UPS for Bypass mode. For example, pressing OFF button in AC mode to turn into Bypass mode.</p>

● 09: Battery maximum discharge time setting

Interface	Setting
<p>The LCD display shows '09<<' at the top and '990' in the middle. Below the text is a small icon of a battery. The display is framed by a decorative border.</p>	<p>Parameter 3: 000~999: Set the maximum discharge time from 0 min. to 999 min. UPS will shut down to protect battery after discharge time arrives. The default value is 990 min. DIS: Disable battery discharge protection and backup time will depend on battery capacity.</p>

● 10: reserved

Interface	Setting
	reserved

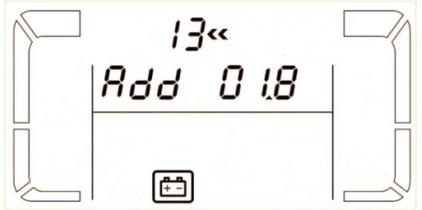
● 11: reserved

Interface	Setting
	reserved

● 12: reserved

Interface	Setting
	reserved

● 13: Battery voltage calibration

Interface	Setting
	<p>Parameter 2: Select "Add" or "Sub" function to calibrate battery voltage to real figure.</p> <p>Parameter 3: The voltage setting range is from 0V to 5.7V. The default value is 0V.</p>

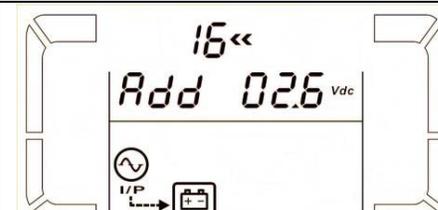
● 14: reserved

Interface	Setting
	reserved

● **15: Inverter voltage calibration**

Interface	Setting
	<p>Parameter 2: you may choose Add or Sub to calibrate inverter voltage</p> <p>Parameter 3: The voltage setting range is from 0V to 6.4V. The default value is 0V.</p>

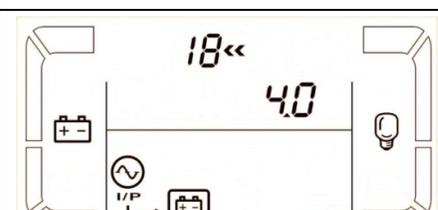
● **16: Floating mode charger voltage adjustment**

Interface	Setting
	<p>Parameter 2: you may choose Add or Sub to adjust floating charger voltage.</p> <p>Parameter 3: the voltage range is from 0V to 6.4V, the default value is 0V.</p>

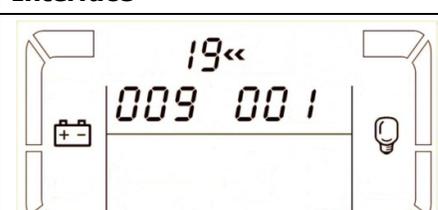
● **17: Constant charger voltage adjustment**

Interface	Setting
	<p>Parameter 2: you may choose Add or Sub to adjust constant charger voltage.</p> <p>Parameter 3: the voltage range is from 0V to 3.2V, the default value is 0V.</p>

● **18: Maximum charger current setting**

Interface	Setting
	<p>Parameter 3: The maximum charging current could be adjusted. Default value is 4A. The available options are 1A, 2A, 4A and 6A.</p>

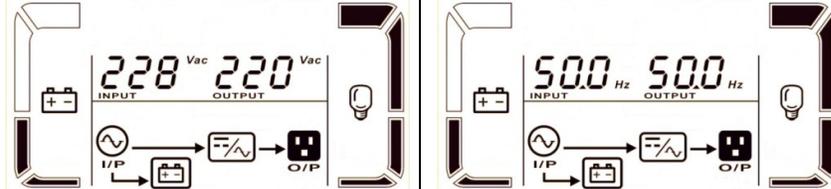
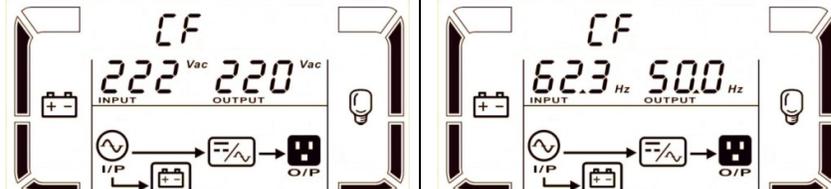
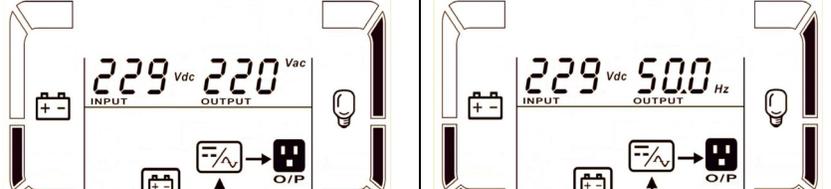
● **19: Battery capacity and strings setting**

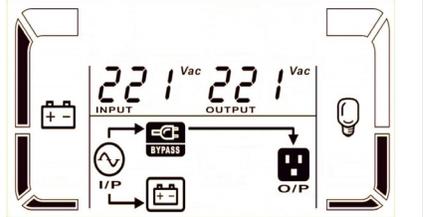
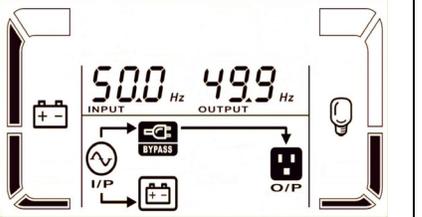
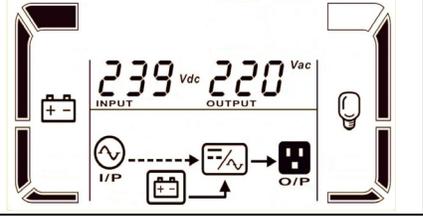
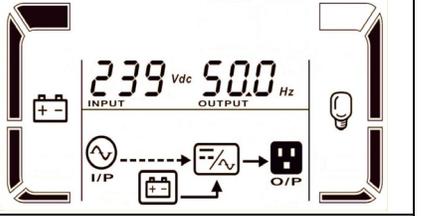
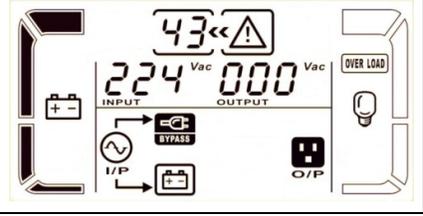
Interface	Setting
	<p>Parameter 2: Set the battery capacity such as 7AH, 9AH, 10AH, 12AH, 17AH, 26AH, 40AH, 65AH, 100AH and so on. The default value is 9AH.</p> <p>Parameter 3: Set battery string range from 1 to 6. The default value is 1. These parameters are for the battery backup time calculation.</p>

● **20: Backup time calibration**

Interface	Setting
	<p>Parameter 3: Calibrate the displayed backup time by adjusting this multiplier factor. The formulation is listed below: Displayed backup time=Original calculated backup time x Multiplier factor The default value of multiplier factor is 1.0 and the setting range is from 0.5 to 2.</p>

3-7. Operating Mode/Status Description

Operating mode/status		
AC mode	Description	When the input voltage is within acceptable range, UPS will provide pure and stable AC power to output. The UPS will also charge the battery at AC mode.
	LCD display	
CVCF mode	Description	When input frequency is within 46 to 64Hz, the UPS can be set at a constant output frequency, 50 Hz or 60 Hz. The UPS will still charge battery under this mode.
	LCD display	
Battery mode	Description	When the input voltage is beyond the acceptable range or power failure, UPS will backup power from battery and alarm will beep every 4 seconds.
	LCD display	
Bypass mode	Description	When input voltage is within acceptable range and bypass is enabled, turn off the UPS and it will enter Bypass mode. Alarm beeps every two minutes.

	LCD display		
Battery Test	Description	When UPS is in AC mode or CVCF mode, press "Test" key for more than 1s. Then, the UPS will beep once and start "Battery Test". The line between I/P and inverter icons will blink to remind users. This operation is used to check the battery status.	
	LCD display		
Fault status	Description	When UPS fault occurs, it will display fault codes in LCD panel.	
	LCD display		

3-8. Fault Code

Fault event	Fault code	Icon	Fault event	Fault code	Icon
Bus start failure	01	None	Low Inverter voltage	13	None
Bus over	02	None	Inverter output short circuited	14	SHORT
Bus under	03	None	Battery SCR short circuited	21	None
Bus unbalance	04	None	Over temperature	41	None
Inverter soft start failure	11	None	Overload	43	OVER LOAD
High Inverter voltage	12	None			

3-9. Warning Indicator

Warning	Icon (flashing)	Alarm
Battery low		Beeping every second
Overload		Beeping twice every second
Battery unconnected		Beeping every second
Over charge		Beeping every second

EPO enable	⚠️ EP	Beeping every second
Over temperature	⚠️	Beeping every second
Charger failure	⚠️	Beeping every second
Overload 3 times in 30min	⚠️	Beeping every second
Maintenance bypass switch handle lock is open	⚠️	Beeping every second

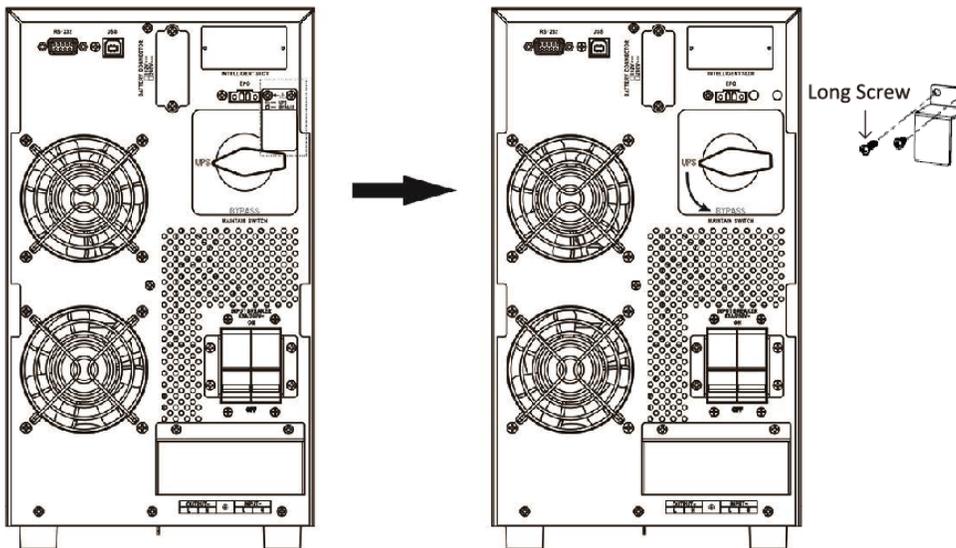
3-10. Maintenance Bypass Switch

Maintenance Bypass Switch (MBS) is designed to provide power during UPS maintenance or replacement. It allows to manually transfer the connected equipment to utility power via a bypass switch without power interruption. UPS maintenance or firmware / hardware upgrade activity can be carried out by transferring the load from UPS to maintenance bypass.

Warning: In maintenance bypass mode, load is connected to the mains supply. Appropriate precaution should be taken to protect the load.

Procedure to transfer the load from UPS mode to Maintenance Bypass

- Verify all the parameter setting in the front panel display.
- Turn off the inverter of the UPS by pressing "OFF" button for at least 1s.
- The buzzer will beep once and UPS will turn into Bypass mode.
- Verify that LCD screen is showing the Bypass mode.
- Remove MBS handle lock by removing its screws.
- Transfer the rotary bypass switch from "UPS" to "Bypass" in counterclockwise rotation.

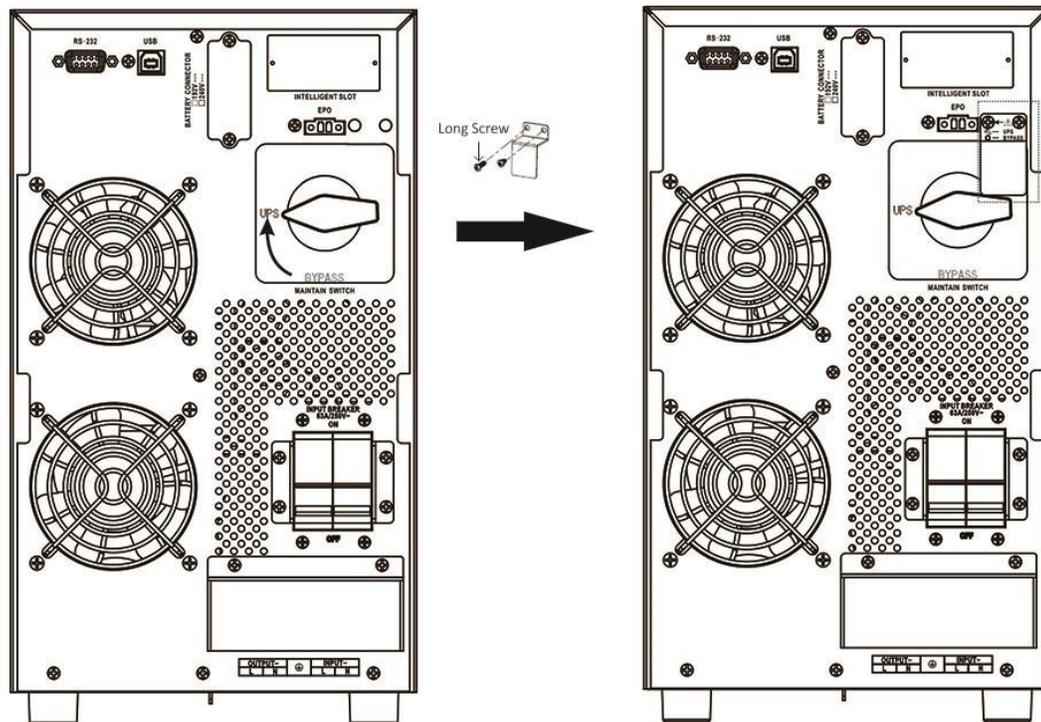


- Turn off the input circuit breaker. The load is now transferred from bypass mode to maintenance bypass mode.
- Follow the procedure / guidelines as described in the user / service manual for UPS maintenance / upgrade procedure.

Procedure to transfer the load from Maintenance Bypass to UPS mode

- a) Verify and ensure that Input circuit breaker is closed and battery is connected to the UPS.
- b) Verify and ensure that LCD screen is showing bypass mode.
- c) Transfer the rotary bypass switch from "Bypass" to "UPS" in clockwise rotation.
- d) Re-assemble and screw the MBS handle lock handle lock back to its original position.
- e) Verify and ensure that MBS handle lock is screwed tightly.

ATTENTION: Without assembling the MBS handle lock, the unit will not transfer back to UPS mode.



- f) Press and hold the "ON" button for 1s to turn on the UPS and the buzzer will beep once.
- g) A few seconds later, the UPS will be turned on and enter to online mode.
- h) Verify that LCD screen is showing the online mode.

4. Trouble Shooting

If the UPS system does not operate correctly, you can try solving the problem by using the table below.

Symptom	Possible cause	Remedy
No indication and alarm in the front display panel even though the mains is normal.	The AC input power is not connected properly.	Check if input cable is firmly connected to the mains.
The icon  and the warning code EP flash on LCD display and alarm beeps every second.	EPO function is enabled.	Set the circuit in closed position to disable EPO function.
The icon  and BATT. FAULT flash on LCD display and alarm beeps every second.	The battery is incorrectly connected.	Check if all batteries are connected properly.
The icon  and OVER LOAD flash on LCD display and alarm beeps twice every second.	UPS is overloaded.	Remove excess load from UPS output.
	UPS is overloaded. Devices connected to the UPS are fed directly by the mains via the Bypass.	Remove excess load from UPS output.
	After repetitive overloads, the UPS is locked in the Bypass mode. Connected devices are fed directly by the mains.	Remove excess load from UPS output first. Then shut down the UPS and restart it.
Fault code 43 is shown. The icon OVER LOAD lights on LCD display and alarm beeps continuously.	UPS is overloaded for too long and fault occurs. Then UPS shuts down automatically.	Remove excess load from UPS output and restart it.
Fault code 14 is shown, the icon SHORT lights on LCD display, and alarm beeps continuously.	The UPS shuts down automatically because short circuit occurs on the UPS output.	Check output wiring and if connected devices are in short circuit status.
Other fault codes are shown on LCD display and alarm beeps continuously.	A UPS internal fault has occurred.	Contact service centre
Battery backup time is shorter than nominal value	Batteries are not fully charged	Charge the batteries at least 10 hours and then check capacity. If the problem still persists, consult service centre
	Batteries defective	Contact service centre to replace the battery.
The icon  and  flash on LCD display and alarm beeps every second.	The UPS temperature is too high.	Check fans and notify service centre.
UPS cannot start up, the icon  flashes on LCD display, and alarm beeps every second.	Cover of maintenance switch is open.	Check if the cover of maintenance switch is screwed tightly.

5. Maintenance



The UPS system operates with hazardous voltages. Repairs may be carried out only by qualified maintenance personnel.



Even after the unit is disconnected from the mains, components inside the UPS system are still connected to the batteries which could be potentially dangerous.



Before carrying out any kind of service and/or maintenance, disconnect the batteries and verify that no current is present and no hazardous voltage exists in the terminals of high capacity capacitor such as BUS-capacitors.



Only persons who are adequately familiar with batteries and with the required precautionary measures may replace batteries and supervise operations. Unauthorized persons must be kept well away from the batteries.



Verify that no voltage between the battery terminals and the ground is present before maintenance or repair. In this product, the battery circuit is not isolated from the input voltage. Hazardous voltages may occur between the battery terminals and the ground.



Batteries may cause electric shock and have a high short-circuit current. Please remove all wristwatches, rings and other metal personal objects before maintenance or repair, and only use tools with insulated grips and handles for maintaining or repairing.



When replacing the batteries, install the same number and same type of batteries.



Do not attempt to dispose of batteries by burning them. This could cause battery explosion. The batteries must be rightly disposed according to local regulation.



Do not open or destroy batteries. Escaping electrolyte can cause injury to the skin and eyes. It may be toxic.



Please replace the fuse only with the same type and amperage in order to avoid fire hazards.



Do not disassemble the UPS.

6. Specifications

CAPACITY*		6000 VA / 4800 W
INPUT		
Voltage Range	Low Line Loss	110 VAC \pm 3 % at 50% Load; 176 VAC \pm 3 % at 100% Load
	Low Line Comeback	Low Line Loss Voltage + 10V
	High Line Loss	280 VAC \pm 3 %
	High Line Comeback	High Line Loss Voltage - 10V
Frequency Range		46Hz ~ 54 Hz @ 50Hz system (Default setting) 56Hz ~ 64 Hz @ 60Hz system
Phase		Single phase with ground
Power Factor		\geq 0.99 at 100% Load
OVCD		Implemented, Cut-off when input voltage 100Vac and 280Vac
OUTPUT		
Output voltage		208/220/230/240VAC (selectable)
AC Voltage Regulation		\pm 1%
Frequency Range (Synchronized Range)		46Hz ~ 54 Hz @ 50Hz system 56Hz ~ 64 Hz @ 60Hz system
Frequency Range (Batt. Mode)		50 Hz \pm 0.1 Hz or 60Hz \pm 0.1 Hz
Overload	AC mode	105%~110%: 30min; 110%~130%: 5min; >130% : 10sec
	Battery mode	105%~110%: 3min; 110%~130%: 30sec; >130% : 10sec
Current Crest Ratio		3:1 max
Harmonic Distortion		\leq 3.5 % THD (Linear Load) \leq 5 % THD (Non-linear Load)
Transfer Time	Line \longleftrightarrow Battery	0 ms
	Inverter \longleftrightarrow Bypass	0 ms
EFFICIENCY		
AC mode		> 92%
Battery Mode		> 90%
BATTERY		
Battery Type		Sealed Maintenance Free Batteries
Numbers		16
Charging Current		Default: 4 A \pm 10% Max.: 1A, 2A, 4A, 6A (Adjustable)
Charging Voltage		218.4V \pm 1%
PHYSICAL		
Dimension, DXWXH(mm)		369 x 190 x 318
Net Weight (kgs)		12.5 \pm 5%
Gross Weight (kgs)		14.5 \pm 5%
ENVIRONMENT		
Operation Temperature		0 ~ 40°C
Operation Humidity		<95 % and non-condensing
Operation Altitude**		<1000m
Acoustic Noise Level		Less than 55dB @ 1 Meter
MANAGEMENT		
Smart RS-232 or USB		Supports Windows® 2000/2003/XP/Vista/2008, Windows® 7/8, Linux, Unix, and MAC
SNMP Card (Option)		Power management from SNMP manager and web browser

* Derated capacity to 60% of max capacity in CVCF mode and to 90% when the output voltage is adjusted to 208VAC.

**If the UPS is installed or used in a place where the altitude is above than 1000m, the output power must be derated one percent per 100m.

***Product specifications are subject to change without further notice.

EQUIPMENT DETAILS

	SERIAL#	
	INSPECTED BY	DATE OF INSPECTION
	DISTRIBUTOR'S / RETAILER'S INVOICE NO. & DATE OF SALE	

SERVICE

In the unlikely event if you are facing a problem that has not been sorted out by troubleshooting, complaints may be logged on our 24-hour service call-desk by calling toll free number 1860 103 0011 or 1800 419 4272

WARRANTY

Schneider Electric IT Business India Private Ltd. (SEITBIPL) warrants this UPS to be free from defects in materials and workmanship for a period of 24 months on UPS from the date of purchase. This obligation is limited to servicing any instrument which shall, within the warranty period, be returned to the company or Authorised Service Centre under a written intimation and which to the company's satisfaction be found defective. The company reserves the right to decide if the repair work should be carried out in the company's service centre or at site or at any other place. The freight incurred for dispatching defective material to & fro will have to be borne by the customer and the transit risk for the material will rest with the purchaser.

The warranty does not extend to any parts of the instrument which have been subjected to misuse, neglect or accident. Further, this warranty does not extend to any instrument which has been tampered with, by any agency not authorized by the company.

The warranty is valid only if the product is used within its specifications. The warranty for the replaced components will lapse along with that of the main instrument.

Schneider Electric IT Business India Private Ltd. (SEITBIPL), reserves the right to make changes in design and specifications without notice and without any obligation to install such changes on units previously supplied.

In no event will **Schneider Electric IT Business India Private Ltd. (SEITBIPL)**, its Distributors / Dealers be liable for consequential or incidental damages or for any expenses incurred by buyer or user, due to use or sale of products sold by **Schneider Electric IT Business India Private Ltd. (SEITBIPL)**, directly or through its authorised Distributors / Dealers or any third party.

Until superseded otherwise or in contractual form this warranty is made expressly in lieu of all other liabilities and obligations on part of **Schneider Electric IT Business India Private Ltd. (SEITBIPL)**.

Title to the instrument passes to the buyer upon delivery to the common carrier.

EN 990-6530
09/2021

LUMINOUS

Schneider Electric IT Business India Private Ltd. (SEITBIPL)

Beary's Global Research Triangle, Sy No. 63/3B, Gorvigere Village,
Bidarahalli Hobli, Bangalore East TQ, Whitefield-Hoskote Rd, Bangalore -560067, INDIA.

E-mail: indiainfo@se.com, Website: www.luminousindia.com

Customer Care Numbers : 1800 103 0011 / 1800 419 4272 #

Note : © The Luminous logo is owned by Luminous Power Technologies Pvt Ltd.
All other trademarks are property of their respective owners.

TOLL FREE NUMBER / *24 HR HELP DESK NUMBER